



Parking Assistance



EPS 416 OEM Parking assistance with 4 rear or front flush-mounted sensors

Rear or front OEM Parking Assistance installation kit

Flush installation with 4 paintable sensors

Option to use 2-3-4 sensors

Spare wheel presence setting

Tow bar presence setting

Self-learning function

Adjustable buzzer

Anti-false alarm technology

Detection accuracy

Waterproof connectors

Optional display

