

UNIVERSAL REMOTE CONTROL

USER MANUAL

SWC-SIDE

Side universal remote control




MACROM


Product overview

The remote control module is an electronic device that allows you to control 5 functions of the radios with a resistive learning system.

The functions that can be managed are: Volume +, / Volume - / Mute / Previous search / Next search

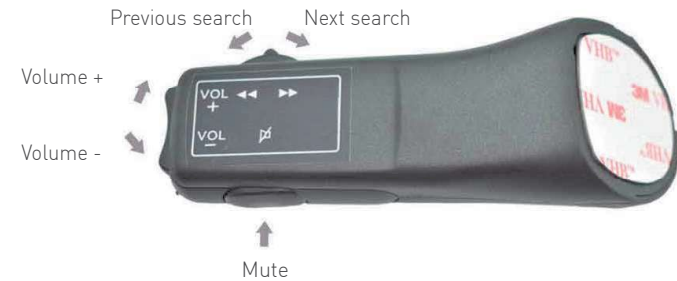

Connections

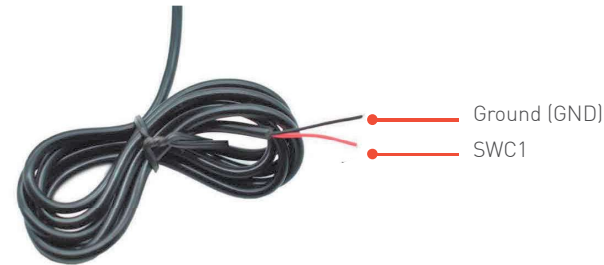

Connect the Black [GND] cable to the steering wheel control input cable of the unit with SWC GND indication. Connect the red wire (SWC1) to the steering wheel control input wire of the radio unit marked SWC 1. To learn the functions, follow the instructions in the radio unit manual.

Installation

Place the remote control on the steering column (left side) below the existing controls if present. Once you have found the ideal position for practical control of the functions, apply the device using double-sided tape or with the screws provided in the package.

