

MULTIMEDIA NAVIGATION RECEIVER

USER MANUAL

M-DL7000D



DAB+
Digital Audio Broadcasting

androidauto



MACROM


Contents

Safety Precautions	1-2	Android Auto	12
Warning.....	2	Installation procedure.....	12-13-14
Product overview	3	Play with Android.....	15
Front Panel.....	3	Map	15
Basic Operation	4	Call out/ receive Call.....	15
Power On/Off	4	BAck to Android Auto	15
Volume Adjusting	4	Play music	15
Mute	4	Talk with Google	15
Playing sources selection	4	Back to unit menu	15
Setting Date/Time.....	4	Playback mode	16
Date	4	Touch screen controls	16
Clock mode	4	Controlling playback	16
Time	4	Connect USB	16
Audio control	5	Remove USB.....	16
Equalizer preset	5	Play/Pause	17
Equalizer parameters	5	Search content	17
Adjst Fad/Bal	5	Repeat.....	17
FM/AM Radio mode	6	Bluetooth mode	18
Radio overview.....	6	Device.....	18
Selection	6	Connecting device	18
Band selection.....	6	Function.....	19
Tune	6	Make a Call.....	19
Preset station	7	Alphabetic search.....	19
Tuning sensitivity.....	7	Streaming Audio.....	19
RDS	7	Setting.....	19
RDS setting	7	Settings.....	20
Radio Data System	8	General	20
AF function.....	8	Video.....	20
EON	8	Volume	20
TA function.....	8	Time	20
CT (clock Time)	8	System	21
PTY function.....	8	Various	21
DAB Radio mode	9	Additional devices.....	21
DAB overview.....	9	Reset	21
Intro.....	9	Steering Whell Control.....	21
Auto store	9	Specifications	22
Manual store.....	9	Troubleshooting	23
Delete service	9	Wire Connetions	24
Recall service	9	Declaration of Conformity.....	25
PTY search.....	9		
Service Link	10		
CarPlay	11		
Play with CarPlay	11		
Call out/ receive Call.....	11		
Map	11		
Message.....	11		
Siri.....	11		


Safety Precautions

Thank you for purchasing this product. Please read through these operating instructions so you will know how to operate your model properly. After you've finished reading the instructions, keep this manual in a safe place for future reference.

Only connect the unit to a 12-volt power supply with negative grounding.

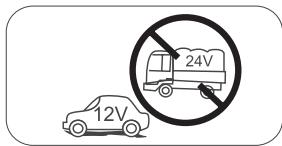

Never install this unit where the operation & condition for safe driving is impaired.

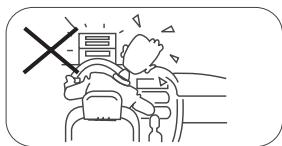


Never use the video display function in the front when driving to prevent the violation of laws & regulations and also to reduce the risk of traffic accident except for using rear view video camera.




Never expose this unit, amplifier, and speakers to moisture or water to prevent electric sparks or fire.



Please don't change the fuse on the power cord without professional guidance, using improper fuse may cause damage to this unit or even cause fire.

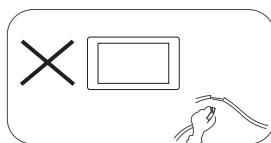

Please contact your nearest dealer if one of the following symptoms is experienced:

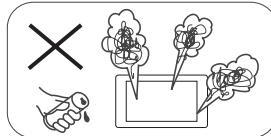

- (a). Water or other objects enters the unit.
- (b). There is smoke.
- (c). Peculiar smell.

To ensure safe driving, please adjust the volume to a safe and comfortable level in case of emergency situations.

Safety Precautions

1. Never disassemble or adjust the unit without any professional guidance. For details, please consult any professional car shop / dealer for inquiry.
2. If the front panel or TFT monitor is dirty, please use a clean silicone cloth and neutral detergent to wipe off the spot. Using a rough cloth and non-neutral detergent such as alcohol for cleaning may result in scratching or decoloration to the monitor.
3. If any abnormal behavior of the unit is found, please refer to trouble shooting guide of this manual. If no relevant information is found, please press the [RESET] key on the front panel to resume factory default.
4. If you have parked the car in hot or cold weather for a long time, please wait until the temperature in the car becomes normal before operating the unit.
5. Using the car heater in low temperature environment may result in moisture inside the unit, DO NOT use the unit in this situation. Eject the disc and wipe off the moisture on the disc. If the unit still doesn't work after a few hours, please contact the service center.
6. Do not impact the LCD monitor which could cause damage.
7. To prevent damage to the screen, avoid touching it with sharp objects.
8. To provide a clear demonstration and an alternative for easy understanding to the operation of this unit, graphic illustrations are used. However, some illustrations are different from the actual images displayed on the screen.
9. Operate the unit correctly according to this manual to prevent unnecessary problem. The guarantee won't be valid if the problem is caused by inappropriate operation.


Warning

Detect parking brake

- In order to be able to install the android application, the handbrake connection must be connected. Engage the parking brake for APP installation.
- Connect the cable "BRAKE" to the parking brake switch to view video files on the TFT monitor. Engage the parking brake for viewing videos.
- When the parking brake is not engaged, the monitor displays "Warning!!!, Video playback is disabled for your safety. Engage parking brake to watch video.", preventing the driver to watch content while driving. The rear screens are not interested in this inhibition.


Importante note:

This connection is indispensable for the proper operation.

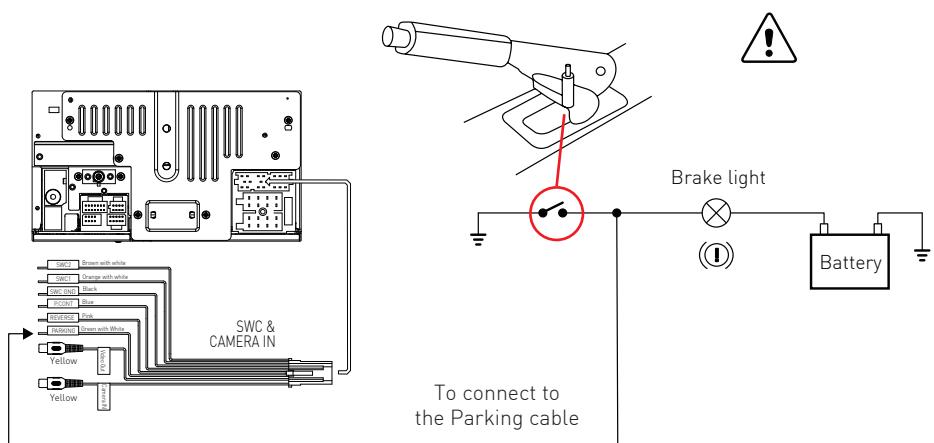

Product overview

Front Panel

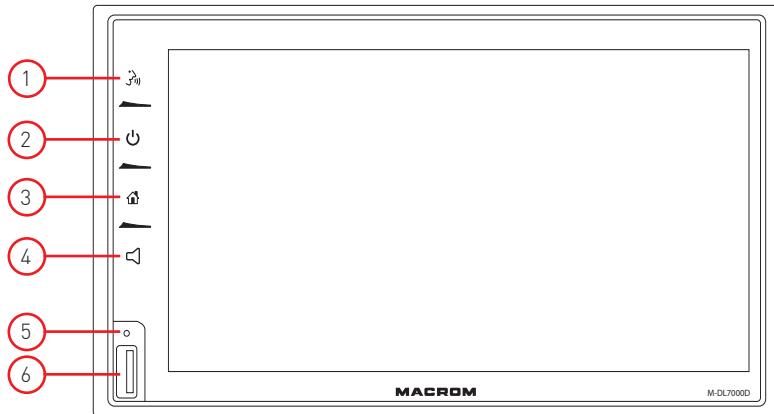

Notice:
The graphic in this manual is for reference only, and may be different from the actual unit.

1. [Siri] button

Activate Siri/Google voice control

2. [⏪] button

Short press: Switch on device

In operation: Mute audio source

Long press: Switch off device

3. [⌂] button

Call up main menu

4. [⏴] button

Show the volume bar

5. Reset Button:

Press to reset system settings to factory default (except password and parental lock settings).

6. USB connector

USB for connecting Car Play and Android Auto mobile devices.

Note: Playback of music / video / picture files takes place by connecting the rear USB socket

Basic Operations

Power On / Off

Press the [] button on the unit to turn the unit on. The buttons on the front of the unit light up and the current mode status appears in the LCD.

Press and hold the [] knob to power off the unit.

Volume Adjustment

You can adjust the volume in steps from 0 (off) to 39 (maximum).

Press the [] button and drag left/right on the volume bar to change the volume.

Mute

Briefly press the [] button to mute the device or to reactivate the previous volume.

Playing Source Selection

Press the [] button on the front panel to display the playing source menu.

The playing mode is displayed on the screen.


1. Date display
2. Time display.
3. Function icons.



Setting Date /Time

1. Touch [Settings].
2. Touch [Time].

The date/time setup menu is displayed.

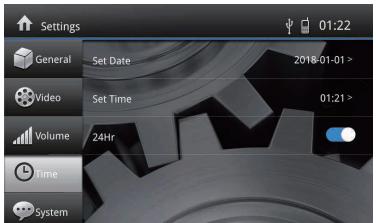

Set Date

1. Touch [Date].
2. Touch the date information on the screen .

A submenu is displayed.

3. Touch [] or [] to set year, month and day.

Set Clock Mode

1. Touch [Clock mode].
2. Touch [12Hr] or [24Hr] to switch clock mode.

Set Time

1. Touch [Time].
2. Touch the time on the screen, a submenu is displayed.
3. Touch [] or [] to set hour and minute.
4. When date/time is set, touch [Save] to confirm or [Cancel] to exit.

Note:

When date/time is set, touch [OK] to confirm or [Cancel] to exit.

Audio control

Equalizer Menu

The Audio Control feature allows you to easily adjust your audio system to meet the acoustical characteristics of your vehicle, which vary depending on the type of vehicle and its measurements. Proper setting of the Fader and Balance boosts the effects of the cabin equalizer.

Select Preset Equalizer

1. Enter the EQ setup mode
Touch the [] icon in the user interface and the EQ setup interface will display on the screen.
2. Select EQ mode
Touch the desired EQ selection: [Comfort] / [Classic] / [Rock] / [Jazz] / [Relax] / [Pop], and the EQ mode will change.



Adjust Equalizer Parameters

To adjust EQ parameters, touch and drag the parameters adjustment bar.

[Customize]: Set the desired audio effect.

[Original]: Select the original audio effect.

[LoudNess: On/Off]: When listening to music at low volumes, this feature will selectively boost certain bass and treble frequencies.

Adjust FAD BAL

You can adjust front/back/left/right balance of the speaker and the subwoofer volume to get balanced listening effect according to the surroundings and your interest.

1. Enter the EQ setup mode
Touch the [] icon in the user interface and the EQ setup interface will display on the screen.
2. Adjust subwoofer volume
Touch [] / [] or drag [] to adjust subwoofer volume from -12 to +12.
3. Adjust fader / balance value
Touch [] / [] / [] / [] to adjust fader / balance value from -7 to +7.
[]: Front speaker
[]: Rear speaker
[]: Left speaker
[]: Right speaker




Notes:

1. The parameters of the EQ modes has been preset and you can not change them besides 'User'.
2. The EQ mode will change to 'User' automatically when you adjust the frequency value under the modes besides 'User'.
3. The value of Sub is independent of EQ mode and can be adjusted separately.

FM/AM Radio mode

Radio overview

1. Touch to view the MENU and select a new playback source
2. Tune backward (short press)
Seek backward (long press)
3. Current radio frequency
4. Tune forward (short press)
Seek forward (long press)
5. Broadcaster information stored at the preset
6. Touch to change between AM/FM bands
7. Search stations automatically
8. To view all the stored stations
9. Enter frequency directly
10. Touch to view more on-screen buttons
11. Clock
12. RDS setting options
13. Save the desired radio station
14. Touch to change between Local and Distance
15. Touch for quick access to EQ level settings

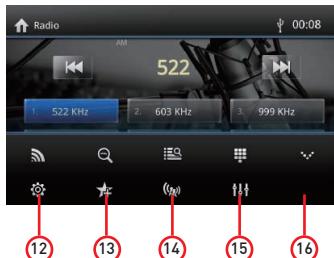

Select Radio as Playing Source

Open the Source Menu and then touch [Radio].

Select One Radio Band

Touch the [] icon on the user interface repeatedly to cycle through the radio bands between FM1, FM2, FM3, AM1 and AM2.

Tune the radio

Auto Tuning

During auto tuning, the frequency will be changed in seek mode.

Touch the [] / [] icon on the user interface to tune in a higher / lower station.

Note: When a station is received, searching stops and the station is played.

Manual Tuning

Method 1:

Touch and hold [] / [] icon on the user interface more than 1 second to change in steps higher / lower station. Repeat the operation to change step by step.

Method 2:

1. Touch the numeric keypad icon [].

Numeric keyboard is displayed, touch number to input frequency.

2. Touch [] to delete the input number step by step.
3. Touch [OK] to enter.



FM/AM Radio mode

Preset Station

The unit has 5 bands, such as FM1, FM2, FM3, AM1, AM2, and each band can store 6 stations; the unit can store 30 stations in total.

Search Stations Automatically

Touch [] to search station and store 6 strongest stations in current band automatically.

Manual Store

1. Tune to a station manually.
2. Touch [].
3. Touch one of the channels P1 to P6 to save the selected station.



Tune to a Preset Station

1. Touch [].
2. Touch one of the preset channels on the screen.

Adjusting the seek tuning sensitivity

The seek tuning sensitivity decides whether the automatic station seek tuning finds only strong stations or also weaker stations that may be noisy.

1. Press the [] button in main menu.
2. Press the button right to [LOC] to adjust the sensitivity of station seek tuning.
If LOC is on, only stations with a strong signal are found during seek tuning.
If LOC is off, stations with a strong and weak signal are found during seek tuning.

EQ Selection

Press the [] icon and enter the EQ setup.

RDS Basics

RDS transmits data to the radio which displays information such as name station, song artist, and song title. RDS service availability varies with areas.

Adjust RDS Settings

1. In Radio menu, touch [].
The option menu is displayed.
2. Touch on the selected option to change the setting.
[RDS]: To turn on or off "RDS" function.
[CT]: To turn on or off "Clock Time" synchronization function.
[TA]: To turn on or off "TA" function.
[PTY]: To show PTY list.



FM/AM Radio mode

RDS (Radio Data System)

The unit provides basic functions of RDS.

RDS service availability varies with areas. Please verify if RDS service is available in your area.

AF Function

Alternative Frequencies Lists are used in conjunction with the PI code (Program Identification code) to assist automatic tuning.

Using this information, the radio can automatically search out another frequency of the same station.

Note:

- During auto switching radio frequency, some interference may be heard..
- Turning off AF function can settle this problem.

TA Function

The TA (Traffic Announcement) function lets the unit receive traffic announcements automatically. The TA function can be activated by a TP (Traffic Program) station broadcasting traffic information. When TA is activated and a traffic announcement is received, the current playing source will be overridden by the traffic announcement. The unit returns to the original source after the traffic announcement has been received.

CT (Clock Time)

Some stations broadcast the time and date within the encoded RDS signal. The clock time is automatically adjusted when 'CT' is set to 'ON'.

PTY Function

PTY is an abbreviation for the type of program defined by a code to define the program being broadcast (eg news or Rock).

The Options of PTY is displayed on the screen. To see the options PTY, tap the scroll bar and arrows on the screen.

When an option is selected PTY (eg News), the radio unit, the PTY search available. If the PTY requested was not found, the unit returns to the original radio frequency.

DAB Radio mode

DAB overview

Playback menu

1. Enter the main menu
2. Information area
3. Display system time
4. Previous station
5. Next station
6. Show service list
7. Auto Scan, Search all service available and store stations automatically.
8. Display the 2nd menu



9. Search mode (All service, Preset, Current)

10. Search service by Programme Type

11. Turn On/Off Service Link

The service link in the On position offers the possibility of searching for the alternative frequency of the service received.

12. Turn On/Off traffic announcement

Auto scan

Only stations with sufficient signal strength will be detected and stored in the memory.

Touch [] to search all service available and store stations automatically.

To stop auto store, press other icons having radio functions.

Note:

1. After auto store, the previous stored stations will be overwritten.
2. The unit has 3 bands, such as DAB1, DAB2 and DAB3.

Manual store

1. Touch the [] icon to show list menu.
2. Touch the [] icon to enter store preset service menu.
3. Select a position to store current service.
4. Touch [] to exit.

Delete stored services

1. Touch the [] icon to show list menu.
2. Touch [] to delete stored services.

Recall the stored services

1. Touch the [] icon to show list menu.
2. Touch to select a preset service.

PTY Search


Touch [] icon to show PTY type.

Touch the [] or [] icon to scroll, and touch to select.

Touch [] to seek a channel within the selected category.

Service Link

Service Link mode, selected in the On position, if the DAB frequency is not present it will be automatically switched to the corresponding station in the FM range.

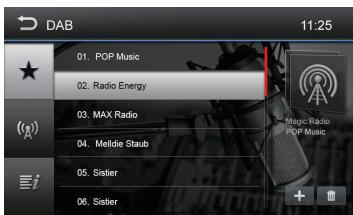

Radio DAB

Service Link

1. Service Link Mode ON,

The following function allows you to automatically search for an alternative frequency to the received station, eg LONDON 1.

If the DAB frequency is not present it will be automatically switched to the corresponding station in the FM range. (See note 1)

2. The DAB signal indicator displays the received signal level in real time.

Excellent level



Discrete level




Good level



Low level



Absent level

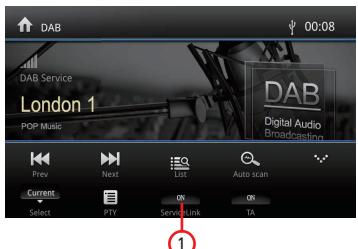


3. Receive mode the type of service received:

DAB Service



The device receives the broadcasters in DAB mode.

 FM Service



The device receives the stations with the same identification and name of the station in FM mode.

Note: if the transmitter received in DAB mode is not present in the FM range, the device will not be able to provide the alternative service.

No Service



The device does not receive DAB or FM signals.

Note: if the absence of the signal persists for 15 seconds, the device will proceed to inform the user to carry out a new search.


4. PopUp AUTOSCAN

The device is ready for automatic scanning when the DAB or FM signal is not present for more than 15 seconds.

The PopUp image will be visible for 5 seconds.

If you decide not to scan, the PopUp window will reappear after a minute.

If the scan will be carried out, the PopUp image will only appear when a new absence of the received signals is present.

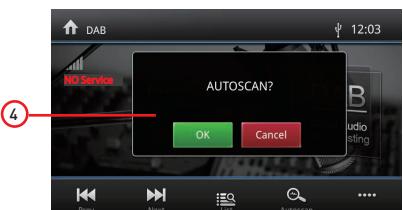

Car Play

Using Apple lightning cable to connect iPhone with the product, and it will automatically show the CarPlay interface. User could directly operate the common functions of iPhone on the product. iPhone support: minimum iPhone5; Required iOS: minimum iOS 7.1.

Play with CarPlay

1. Select the CarPlay source to play music.

Play Music

Touch the main interface of CarPlay mode to access all of your content from iTunes.

Call Out / Receive Call

Touch the Phone of CarPlay mode for Calling.

Map

Touch the Map of CarPlay mode to let the iPhone show you the way.

Message


Touch the Messages of CarPlay mode for sending message or check unread message.

Siri

1. Touch and hold Apple Home key on product or iPhone for using Siri voice assistant, such as issuing a call, playing music, opening the map and other voice commands.
2. Touch the Siri key on the front panel.
3. When iPhone is connected, enable Siri by steering wheel control
This function is only available on cars equipped with the equivalent key
4. Control with "Hey, Siri".




CarPlay

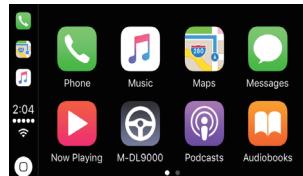


Play music



Call Out/Receive Call

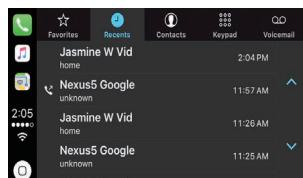

Use map

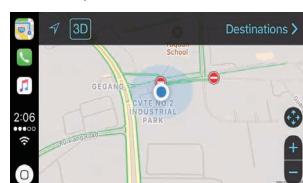


Android Auto

Connect Android phone by standard micro USB cable, drivers can enjoy the music from their phone, show the way with Google map or other map App and make or receive a call. User need to enable Bluetooth on phones and the product at the same time. Required Android OS: 5.0. (Android Auto App must be installed on the phone before connecting).

Installation procedure

The following procedure illustrated for the installation of Android Auto APP.

Note: The sequence shown may vary depending on the device connected.

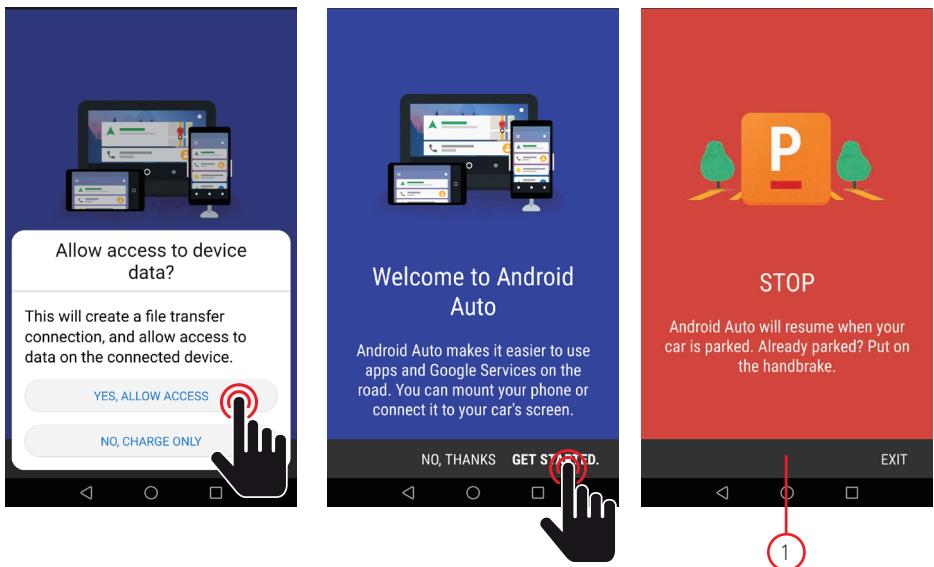


IMPORTANT NOTE:

In order to continue with the APP installation, the vehicle must be parked with the handbrake inserted.


Android Auto

Installation procedure

To continue with the installation, you must agree to the terms provided by Google.

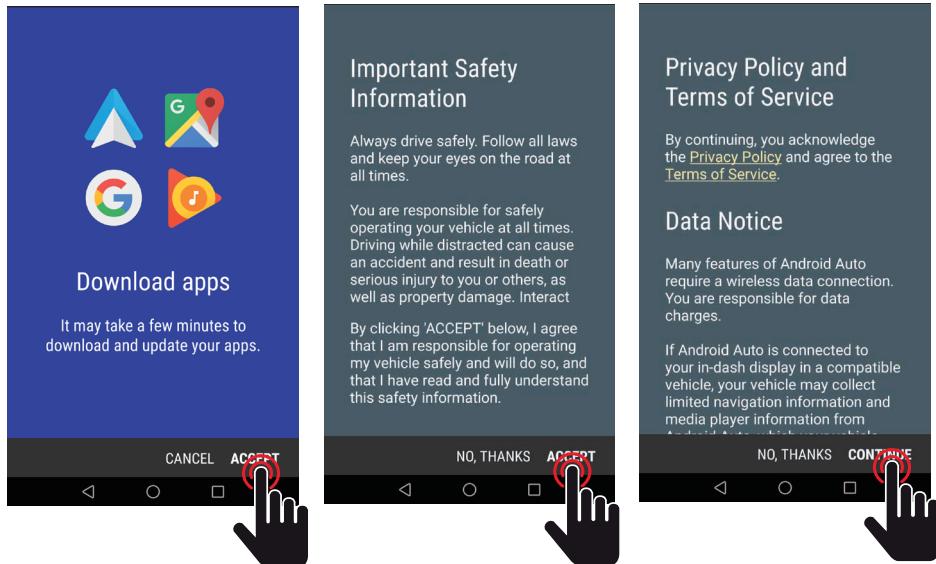


Next step, are to allow Android Auto to easily work with navigation, music, calls messages and other voice commands. If you want these functions to Allow or Deny the functions.

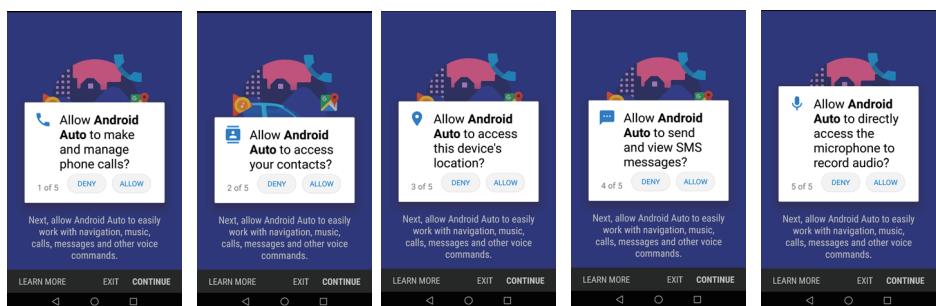


Android Auto

Next step, are to allow Android Auto to show your notifications on top of your other apps.

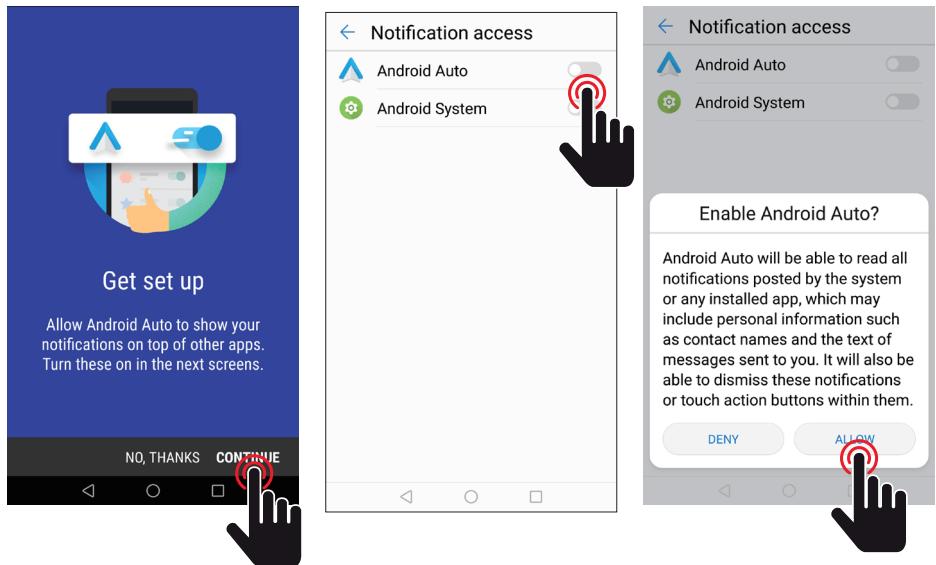

Next step, Get started to Android Auto.

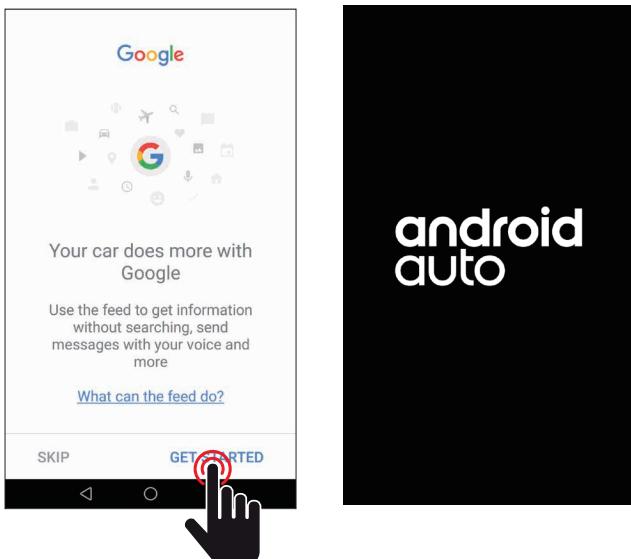

Android Auto

Connect Android phone by standard micro USB cable, drivers can enjoy the music from their phone, show the way with Google map or other map App and make or receive a call. User need to enable Bluetooth on phones and the product at the same time. Required Android OS: 5.0. (Android Auto App must be installed on the phone before connecting).

Play with Android Auto

1. Select the Andorid Auto source to play music.

Map

Touch the () icon of Android Auto to let the phone show you the way.



Call Out / Receive Call

Touch the () icon on Android Auto for Calling.


Back to Android Auto

Touch the () icon of Android Auto to back on main menu.

Play Music

Touch the () icon of Android Auto to play music.

Andorid Auto

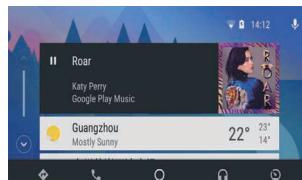

Talk with Google

1. Touch the () on product for using Google voice assistant, such as issuing a call, playing music, opening the map and other voice commands.
2. Touch the () on the top right of LCD .
3. When Phone is connected, enable Google voice by steering wheel control
This function is only available on cars equipped with the equivalent key
4. Control with "Ok, Google".

Back to unit menu


Touch the () icon of Android Auto to back on unit main menu.

Playback Mode

Touch Screen Controls

The touch key areas for playback are outlined below:

- A: Return to the main menu
- B: Display onscreen control menu
- C: Time display

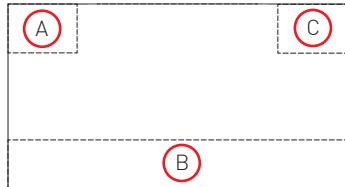

Controlling Playback

To access the on-screen controls, touch the screen except upper left corner, and touch again to cancel display. Touch [••••] to view all function icons.

Connect a USB Device

1. Open the USB door.
2. Insert the USB socket, then connect the other end of the cable to your USB device.

Remove a USB Device

1. Select other source on the main menu.
2. Remove the USB device.

Play/Pause

1. Once USB or SD/MMC card is inserted, play starts automatically.
For movie, if a menu appears, press [▶] to start play.
2. To pause, touch [■].
To resume play, touch [▶].
3. Skip to previous / next track / chapter, press [◀◀] / [▶▶] key.

Previous/Next


Touch [◀◀] / [▶▶] key on the screen to skip to previous / next track / chapter.

Playback Mode

Search for a content

For Folder Control

1. Touch [] to display all available folders
2. Touch a folder, then touch the desired file.
3. Touch the file again to start play

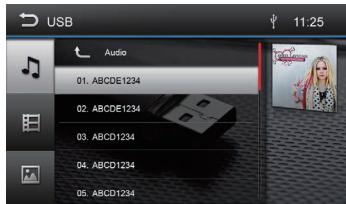

For Audio Files

1. Touch [] to display all available audio folders.
2. Touch a folder, then touch the desired file.
3. Touch the file again to start play.



For Video Files

1. Touch [] to display all available video folders.
2. Touch a folder, then touch the desired file.
3. Touch the file again to start play.



For Picture Files

1. Touch [] to display all available picture folders
2. Touch a folder, then touch the desired file.
3. Touch the file again to start play.

Repeat

1. Touch anywhere except the upper left corner to display menu on the screen.
2. Touch [] repeatedly:
 - [] Repeat off: Cancel repeat play.
 - [] Repeat folder: Play all in the current folder.
 - [] Repeat single: Play the current single repeatedly.

Shuffle (Random) Play

You can play audio tracks/files in random order.

1. Touch [] to display the 2nd menu.
2. Touch [] on the screen repeatedly to turn random play on or off.

Rotate Pictures

1. When you view pictures, touch the screen to display menu on the screen, if necessary.
2. Touch [] to display the 2nd menu.
3. Touch [] or [] repeatedly to rotate the picture.

Zoom in or out

1. When you view pictures, touch the screen to display menu on the screen, if necessary.
2. Touch [] to display the 2nd menu.
3. Touch [] or [] repeatedly to zoom in or out the picture.

Bluetooth mode

You can make or receive phone calls with Bluetooth-enabled phones through the unit. You can also listen to music from a Bluetooth-enabled device.

Bluetooth device

- In the main menu, press [Phone] the Bluetooth menu will be displayed. The list shows known Bluetooth devices.
 - [] Add a new Bluetooth device.
 - [] Displays the settings menu.
- Press the [] key of the Bluetooth device with which you want to establish a connection. When the device is within range and the connection is established, the device is displayed in the menu.
- Press the [] button if you want to delete the Bluetooth device from the list.



Connecting Bluetooth devices

If you want to connect a device to the audio system for the first time, do the following:

1. Activate the Bluetooth function on the device.
2. Touch [] to search for the Bluetooth device with the unit.
3. Start scanning on the Bluetooth device and select the unit "M-DL7000D"

The connection is established and the menu for the registered device is displayed.

Note:

If a telephone is connected with the car sound system, the Bluetooth icon is displayed at the top right edge of the display in all audio/video sources.

Bluetooth mode

Bluetooth function

- [] Call up the phone book.
- [] Call up records lists.
- [] Display the dial keypad menu.
- [] Disconnect connection with current device.
- [] Display options menu.



Make a Call

- Enter a phone number with the dial keypad and press the [] button.
 - Or -
- Select a contact/number via the records lists or phone book.
The connection is being established.
If a call is coming in, the call menu is displayed.
[] [Hang up]: Reject a call.
[] [Answer]: Answer a call.




Alphabetic search

Press [] on the left bottom of the screen to access Phonebook. If you want to search a contact, press [] and enter the characters via the keypad.

Audio playback via Bluetooth streaming

A2DP is short for Advanced Audio Distribution Profile. The mobile phones supporting this function can transmit stereo audio, whereas the ones not supporting this function can transmit mono audio only.

- Press the [BT Music] button on main menu to change to the audio playback.
- [] Title selection.
- [] Interrupt playback and continue playback.
- [] Title selection.
- [] Enter the EQ setup menu.
- [] Disconnect connection with current device.

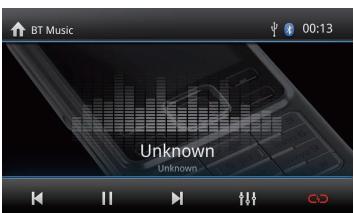

Bluetooth settings

- Press the [] button.
The options menu is displayed.
 - [Auto Connect]: If "Auto Connect" is activated, the unit automatically connects to the Bluetooth devices listed.
 - [Auto Answer]: If "Auto Answer" is activated, incoming phone calls are automatically answered.
 - [Phone book sync]: To be able to access the phonebook of the connected phone, synchronization is required.



Settings

General

1. Touch [General] in the settings page.
2. Touch to highlight a setting.
3. Touch to display/select an option.

General settings	Options	Description
System Language	Select on-screen display language.	
Lighting	You can select the key color.	
Radio Area	Select your region of origin.	
Beep	On	Turn on the beep sound. Each time you press a button, the unit beeps.
	Off	Turn off the beep sound.
SWC	Steering wheeel control	
LOC	On	If LOC is on, only stations with a strong signal are found during seek tuning.
	Off	If LOC is off, all stations are tuned during search.
Sleep Time	Mode	Select Sleep Time from 0Min, 10Min, 30Min and 60Min.

Video

1. Touch [Video].
2. Touch an option repeatedly to select:

Video settings	Options	Description
Parking	On	Disable video
	Off	Enable video
Day/Night Mode	Day/Night/Auto	
Brightness	0-10	Adjust the display Brightness.

Volume

You can set different volumes for different modes.

1. Touch [Volume].
- The volume setting sub-menu is displayed.
2. Touch to select a source.
3. The volume range is from: -12 to 12.
- When switching to the source, the volume increases automatically.
4. Touch the upper left corner of the screen to exit.

Time

1. Touch [Time].
2. Touch an option repeatedly to select:
3. Touch the upper left corner of the screen to exit.

Time settings	Options	Description
Set Time	Hour	To set hour and minute.
	Minute	To set AM/PM (only for 12Hr).
Set data	Y/M/D	To set year, month and day.
12H Format	On/Off	Touch On/Off to switch to time mode.

Settings

System

1. Touch [System].
2. Touch an option repeatedly to select:

System settings	Description
MCU Update	Update MCU
MPEG Update	Update MPEG
MCU Version	Display the current MCU version information.
MPEG Version	Display the current MPEG version information.
Load factory	Restore to default settings.

Various

Additional devices


You can connect an external audio/video device to the unit.

1. Connect the external device with the supplied AV cable.
2. Touch the upper left corner to display the main menu.
3. Touch [AV-IN] to access external device.

Reset

When the unit hangs up, you can reset it.

1. Press [RESET] with a ball-point pen or similar tool.

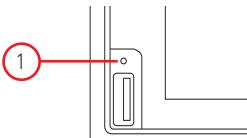


Replace a Fuse

If there is no power, the fuse may be damaged and need to be replaced.

1. Remove the unit from the dashboard.
2. Check all electrical connections.
3. Buy a fuse that matches the amperage of the damaged fuse.
4. Replace the fuse while the unit is powered off.

Steering Wheel Control Programming

1. Touch the [] button in main menu, the settings menu is displayed.
2. Touch [General setting] in the settings page.
3. Touch [SWC], the SWC menu will display.
4. Select the keys corresponding to the functions of steering wheel controls by tapping the KEY and define the desired function.
5. Touch [Match] to program.
6. Press each individual steering wheel control button for each corresponding function.
7. Once the final steering wheel control button is programmed, the functions are saved and the programming.
8. Touch [Reset] to reset the programming.

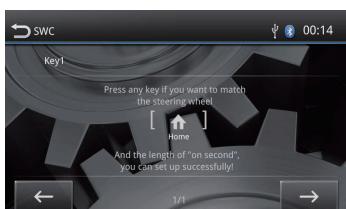

Specifications

General

Reference Supply Voltage	12V ==
Operating Voltage Range	9 - 16V ==
Max Operating Current.....	15A
Grounding System	Car Battery Negative Pole
Dimensions(WXHxD).....	178X100X166.5mm
Weight(main unit)	1.9kg

FM

Signal Noise Ratio	≥55dB
Residual Noise Sensitivity (S/N=30dB)	≤10dB μ V
Frequency Response (±3dB)	40Hz~12KHz
Station Seeking Level.....	23±3dB μ V
Distortion	≤1.0%
Stereo Separation (1KHz.....	≥25dB
Antenna Impedance.....	75Ω
Frequency range.....	87.5 / 108,0MHz

AM

Residual Noise Sensitivity (S/N=20dB)	≤28dB μ V
Selectivity (±9KHz	≥50dB
Frequency range.....	.522/1620KHz

DAB

Residual Noise Sensitivity (RF=72dBm).....	60dB
Stereo Separation (1KHz).....	≥55dB
Frequency range.....	174 / 240MHz

BT

Frequency	2,402 - 2,480GHz
EIRP power	0.94dbm

LCD

Screen size.....	6.75 inches(16:9)
Display resolution.....	800X480dots
Contrast ratio.....	400
Brightness	280cd/m ²

Power output

Frequency Response (±3dB	50Hz~16KHz
Maximum Output Power	4x40W
Load Impedance	4Ω

AUX IN

Distortion	≤0.5%
Frequency Response (±3dB	50Hz~20KHz
Audio Input Level	0.5Vrms

Audio

Audio Output Impedance	100Ω
Audio Output Level	2Vrms[Max]

Video

Normal Video Input Level (CVBS	1.0±0.2V
Video Input Impedance	75Ω
Video Output Impedance	N/A
Video Output Level.....	N/A

Environment

Operating Temperature.....	-20°C ~ +70°C
Storing Temperature.....	-30°C ~ +80°C
Operating Humidity.....	45%~80%RH
Storing Humidity.....	30%~90%RH

Versione Software


MCU	Ver 1.15
-----------	----------

Troubleshooting


If the unit is faulty, please consult the following points before calling the service center.

Problem	Phenomena	Solutions
Unit	Cannot power on/off	Check the connection, if it is broken, try to reconnect it; Check the main fuse, if it is damaged, replace it; Press reset key.
	No sound	Adjust the volume. Confirm whether the music and video is supported or not.
Reversing	Abnormal picture	Exit reversing mode and enter again. Check whether the camera is covered by foreign matters. Check whether the type of reverse camera is matched or not. Check the reversing signal cable.
Radio	Noisy; Cannot search the station	Ensure there is no metal products around the machine. Driving the vehicle to the place where the radio signal is good and search the station. If the solutions above are invalid, please check whether the antenna is disconnected, damaged, etc.
Navigation	Satellite positioning failure	Please make sure that the SD card has been inserted into the machine, which has navigation map software inside. Driving the vehicle to the open place and search the satellite, the result will be different due to weather conditions.
Bluetooth	Connecting fail	Please make sure that the Bluetooth of mobile device is turned on.
USB playing	Playing fail	Ensure the U disk is not damaged. Please make sure that the format of content is supported.

Wire Connections

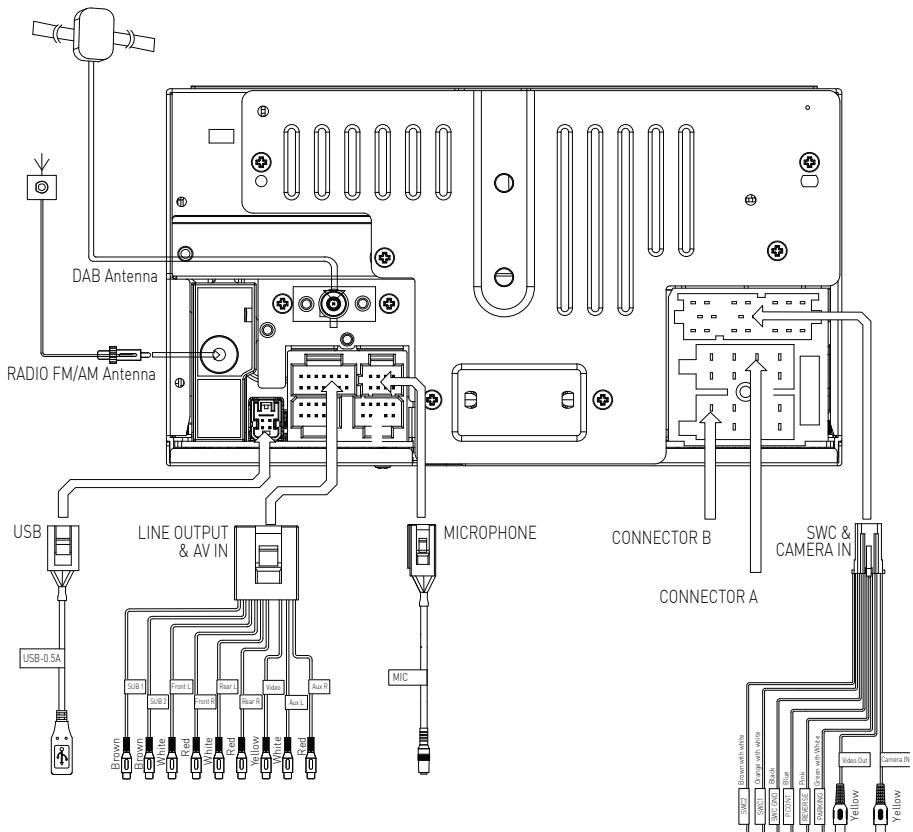

PIN NO.	Function	
	Connector A	Connector B
1	Rear right [-] / Purple	
2	Rear right [-] / Purple with black stripe	
3	Front right / Gray	
4	Front right [-] / Gray with black stripe	ACC+ / Red
5	Front left [+]/ White	Antenna - Power Control / Blue
6	Front left [-] / White with black stripe	Illumination / Orange
7	Rear left [+]/ Green	Battery 12V(+)/Yellow
8	Rear left [-] / Green with black stripe	Ground / Black

 

Declaration of Conformity



The manufacturer GMA ITALIA s.r.l. declares that the type of radio equipment - Multimedia Monitor, model M-DL7000D, brand Macrom - complies with the 2014/53 / EU Directive.

The full text of the EU Declaration of conformity is available at the following internet address: www.macrom.it, or at GMA ITALIA s.r.l. - V. Di Vittorio, 7/33 Rho - 20017 (MI) Italy

Made in China by
GMA ITALIA s.r.l. - V. Di Vittorio, 7/33 Rho - 20017 (MI) Italy

Information on disposal of unit



This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE).

This means that this product must be handled to the local collecting points or given back to retailer when you buy a new product, in a ratio of one to one (or one to zero if the external dimension is less than 25 cm) pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.

For further information, please contact your local or regional authorities.

Electronic products not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.

The unlawful disposal of the product carries a fine according to the legislation currently in force.



w w w . m a c r o m . i t