

MULTIMEDIA NAVIGATION RECEIVER

USER MANUAL

M-DVD6000DAB



MACROM


Contents

Safety Precautions	1-2	Eject a Disc	14
Expanding system	2	Touch Screen Controls	14
Product overview	3	Controlling Playback	14
Front Panel	3	Connect a USB Device	14
Remote control overview	4	Remove a USB Device	14
Front view	4	Play/Pause	14
Remote battery	5	Previous/Next	14
Basic Operations	6	Search for a Folder	15
Detect parking brake	6	Repeat	15
Mute	6	Repeat A-B	16
Power On / Off	6	Shuffle (Random) Play	16
Audible Beep Confirmation	6	Select Audio Mode	16
Playing Source Selection	6	Select Subtitle Language	16
EQ Menu	7	Playback Information	17
Select Preset Equalizer	7	Direct Track Entry	17
Adjust EQ Parameters	7	Rotate Pictures	17
Adjust FAD BAL	7	Zoom	17
Set Date	8	Video Setup	17
Set Clock Mode	8	Bluetooth Mode	18
Set Time	8	Pair the Bluetooth-enabled Devices	18
Radio Mode	9	Disconnect Bluetooth Device	18
Tuner TFT Display	9	Make a Call	15
Select Radio as Playing Source	9	Receive a Call	19
Select One Radio Band	9	Adjust Bluetooth Settings	19
Tune the radio	9	Bluetooth Musci Mode	19
Preset Station	10	Settings	20
local Seeking	10	General settings	20
RDS Basics	10	Calibration	20
Adjust RDS Settings	10	Video settings	20
RDS (Radio Data System)	11	Sound settings	21
AF Function	11	Time settings	21
EON (Enhanced Other Networks)	11	Language settings	21
TA Function	11	Bluetooth settings	21
CT (Clock Time)	11	DVD settings	22
PTY Function	11	Volume settings	22
DAB Radio	12	Other Modes	23
Select DAB as playing source	12	ther Devices	23
Playback menu	12	Reset	23
Select on DAB band	12	Replace a Fuse	23
Intro	12	Navigation (GPS)	23
Auto store	12	SWC Programming	23
Manual store	13	Specifications	24
Delete stored services	13	Region Code	25
recall the stored services	13	Cautions when using Discs	25
PTY serach	13	Troubleshooting	26
L-Band ON/OFF	13	Wire Connections	27
Service Link	13	Declaration of Conformity	28
Playback Mode	14		
Load a Disc	14		


Safety Precautions

Thank you for purchasing this product. Please read through these operating instructions so you will know how to operate your model properly. After you've finished reading the instructions, keep this manual in a safe place for future reference.


Only connect the unit to a 12-volt power supply with negative grounding.

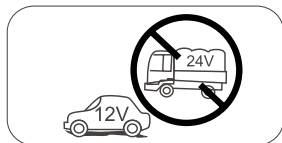


Never install this unit where the operation & condition for safe driving is impaired.

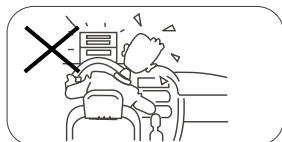


Never use the video display function in the front when driving to prevent the violation of laws & regulations and also to reduce the risk of traffic accident except for using rear view video camera.

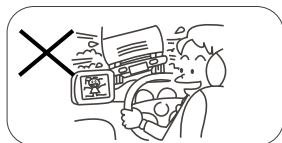


Never expose this unit, amplifier, and speakers to moisture or water to prevent electric sparks or fire.

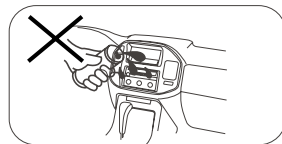

Please don't change the fuse on the power cord without professional guidance, using improper fuse may cause damage to this unit or even cause fire.

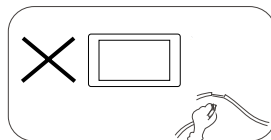

Please contact your nearest dealer if one of the following symptoms is experienced:

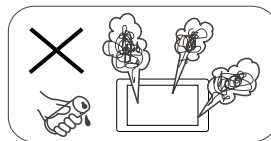

- (a). Water or other objects enters the unit.
- (b). There is smoke.
- (c). Peculiar smell.

To ensure safe driving, please adjust the volume to a safe and comfortable level in case of emergency situations.

Safety Precautions

1. Never disassemble or adjust the unit without any professional guidance.
For details, please consult any professional car shop / dealer for inquiry.
2. If the front panel or TFT monitor is dirty, please use a clean silicone cloth and neutral detergent to wipe off the spot. Using a rough cloth and non-neutral detergent such as alcohol for cleaning may result in scratching or decoloration to the monitor.
3. If any abnormal behavior of the unit is found, please refer to trouble shooting guide of this manual. If no relevant information is found, please press the [RESET] key on the front panel to resume factory default.
4. If you have parked the car in hot or cold weather for a long time, please wait until the temperature in the car becomes normal before operating the unit.
5. Using the car heater in low temperature environment may result in moisture inside the unit, DO NOT use the unit in this situation. Eject the disc and wipe off the moisture on the disc. If the unit still doesn't work after a few hours, please contact the service center.
6. Do not impact the LCD monitor which could cause damage.
7. To prevent damage to the screen, avoid touching it with sharp objects.
8. To provide a clear demonstration and an alternative for easy understanding to the operation of this unit, graphic illustrations are used.
However, some illustrations are different from the actual images displayed on the screen.
9. Operate the unit correctly according to this manual to prevent unnecessary problem. The guarantee won't be valid if the problem is caused by inappropriate operation.

Information on disposal of unit



This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE).

This means that this product must be handled to the local collecting points or given back to retailer when you buy a new product, in a ratio of one to one (or one to zero if the external dimension is less than 25 cm) pursuant to European Directive 2012/19/EC in order to be recycled or dismantled to minimize its impact on the environment.


For further information, please contact your local or regional authorities.

Electronic products not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.

The unlawful disposal of the product carries a fine according to the legislation currently in force.

Product overview

Front Panel

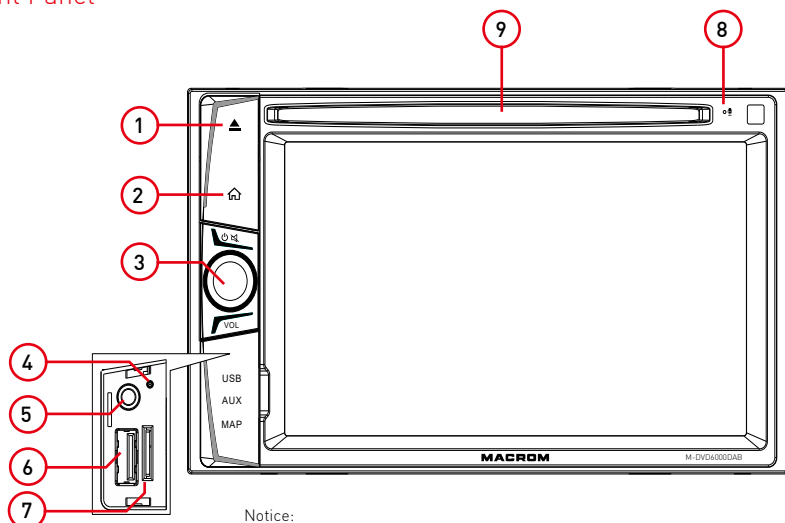


Notice:

The graphic in this manual is for reference only, and may be different from the actual unit.

1. [] Button
Press to eject a disc.
2. [MENU] Button
Press to switch between the available audio/video sources applied to the unit.
3. [VOL/] Knob
Rotate to adjust the volume.
Press momentarily to activate the MUTE function. Press again to resume normal listening.
Press to turn the unit ON. Press and hold to turn the unit OFF.
4. Reset Button
Press to reset system settings to factory default (except password and parental lock settings).
5. Auxiliary Audio/Video Input
Accepts a 3.5mm jack through which signals from various audio/video devices can be applied to the unit.
6. USB Connector
Connect a USB device for playback of music/video files.
7. Map Slot
The Mini SD card is used for the Navigation Map only, not for music or other files.
This may be used for firmware updates if required.
8. Internal Microphone
Internal microphone for Bluetooth calls.
9. Disc slot

Remote control overview

Front view

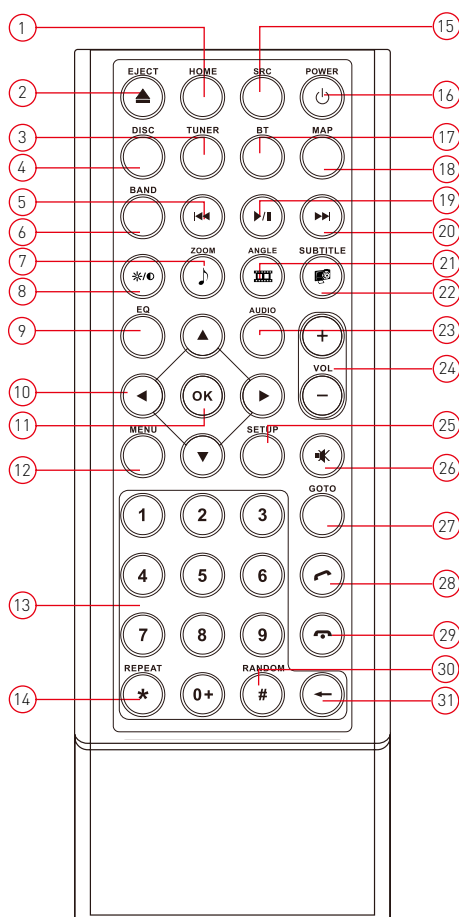

1. Return to the home menu
2. Eject the disc
3. Access to tuner source
4. Access to disc source
5. Search an available radio station by decreasing tuning frequency
6. Select the previous chapter/track for playback
7. Select radio band
8. Zoom in (Picture menu)
9. Access to music list
10. Adjust screen settings
11. Open EQ menu
12. Menu cursor
13. Enter
14. Open route menu (DVD)
15. Turns on/off PBC (VCD)
16. Digit area
17. Repeat playback
18. Change to next source
19. Power on/off
20. Access to Bluetooth source
21. Access to navigation source
22. Pause playback/Start playback
23. Search an available radio station by increasing tuning frequency
24. Select the next chapter/track for playback
25. Playback disc in different angle for a scene (DVD)
26. Rotate (photo playing)
27. Access to video list
28. Language selection for subtitle (DVD)
29. Access to photo list
30. Change the audio language for disc playback (DVD)
31. Increase/Decrease volume
32. Access to settings source
33. Mute on/ off audio output
34. Activate direct access mode
35. Dial/Receive a call
36. Hang up
37. Play all chapter/tracks in random order
38. Press to clear the number one by one
39. Hold to clear all the numbers

Remote battery

Notes of remote control using

- 1) Aim the remote control at the remote sensor on the unit.
- 2) Remove the battery from the remote control or insert a battery insulator if the battery has not been used for a month or longer.
- 3) DO NOT store the remote control under direct sunlight or in high temperature environment, or it may not function properly.
- 4) The battery can work for 6 months under normal condition. If the remote control can't work, please change the battery.
- 5) Use "button shaped" lithium battery "CR2025" (3V) only.
- 6) DO NOT recharge, disassemble, heat or expose the battery in fire.
- 7) Insert the battery in proper direction according to the (+) and (-) poles.
- 8) Store the battery in a place where children cannot reach to avoid the risk of accident


Back view

Uninstall Battery

Slide out the battery compartment tray at the bottom on the back of the remote control.

Install Battery

Use button-shaped lithium battery CR2025 (3V) only. Insert the battery to the battery tray with proper direction according to the (+) and (-) poles.

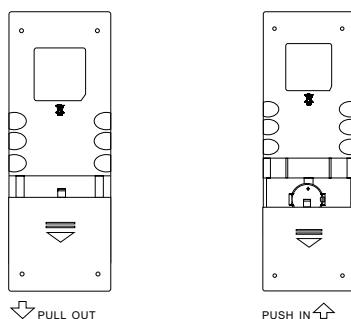

Warning

WARNING: The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.

They can take this product for environmental safe recycling.

WARNING

Do not ingest the battery, Chemical Hazard

This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Disposal notes

Do not dispose of your old unit in the household trash!

Use the return and collection systems available to dispose of the old device, the remote control and exhausted batteries.

Basic Operations

Detect parking brake

- Connect the cable "BRAKE" to the parking brake switch to view video files on the TFT monitor. Engage the parking brake for viewing videos.
- When the parking brake is not engaged, the monitor displays "Warning!!!, Video playback is disabled for your safety. Engage parking brake to watch video.", preventing the driver to watch content while driving. The rear screens are not interested in this inhibition.

Mute

Press [VOL/🔇] knob to mute the volume from the unit. Press again to restore the volume. [🔇] is displayed on the LCD. Adjusting the volume or using any of the audio setup features cancels the mute function.

Power On / Off

Press the [VOL/🔇] knob on the unit to turn the unit on. The buttons on the front of the unit light up for a moment and the current mode status appears in the LCD. Press and hold the [VOL/🔇] knob to power off the unit.

Audible Beep Confirmation

An audible beep tone confirms each function selection. The Beep tone can be disabled through the Setup menu.

Playing Source Selection

Press the [🏠] button on the front panel to display the playing source menu. The playing mode is displayed on the screen.

1. Date and Time display.
2. Function icons.
3. All SRC.



Volume Adjustment

To increase or decrease the volume level, turn the [VOL/🔇] knob on the front panel. The volume ranges from "0" to "50". The LCD or TFT screen displays the volume level for 3 seconds.




Basic Operations

EQ Menu

The Audio Control feature allows you to easily adjust your audio system to meet the acoustical characteristics of your vehicle, which vary depending on the type of vehicle and its measurements. Proper setting of the Fader and Balance boosts the effects of the cabin equalizer.

Select Preset Equalizer

1. Enter the EQ setup mode
Touch the  icon in the user interface and the EQ setup interface will display on the screen.
2. Select EQ mode
Touch the desired EQ selection: [Optional] / [Classic] / [Rock] / [Jazz] / [Techno] / [Pop], and the EQ mode will change.





Adjust EQ Parameters

To adjust EQ parameters, touch and drag the parameters adjustment bar.

- [User]: Set the desired audio effect.
- [Flat]: Select the original audio effect.
- [Reset]: Cancel the equalizer function settings.
- [Loud: On/Off]: When listening to music at low volumes, this feature will selectively boost certain bass and treble frequencies.

Adjust FAD BAL

You can adjust front/back/left/right balance of the speaker and the subwoofer volume to get balanced listening effect according to the surroundings and your interest.

1. Enter the EQ setup mode
Touch the  icon in the user interface and the EQ setup interface will display on the screen.
2. Adjust subwoofer volume
Touch [▲] / [▼] or drag  to adjust subwoofer volume from -12 to +12.
3. Adjust fader / balance value
Touch [▲] / [▼] / [◀] / [▶] to adjust fader / balance value from -20 to +20.
 - [▲]: Front speaker
 - [▼]: Rear speaker
 - [◀]: Left speaker
 - [▶]: Right speaker



Notes:

1. The parameters of the EQ modes has been preset and you can not change them besides 'User'.
2. The EQ mode will change to 'User' automatically when you adjust the frequency value under the modes besides 'User'.
3. The value of Sub is independent of EQ mode and can be adjusted separately.

Setting Date /Time

1. Touch [⚙️].
2. Touch [Time].
The date/time setup menu is displayed.

Set Date

1. Touch [Time].
2. Touch the date information on the screen .
A submenu is displayed.
3. Touch [▲] or [▼] to set year, month and day.

Set Clock Mode

1. Touch [Clock mode].
2. Touch [12Hr] or [24Hr] to switch clock mode.

Set Time


1. Touch [Time].
2. Touch the time on the screen, a submenu is displayed.
3. Touch [▲] or [▼] to set hour and minute.
4. When date/time is set, touch [Save] to confirm or [Cancel] to exit.



Radio Mode

Tuner TFT Display

1. Touch to view the MENU and select a new playback source
2. Strong Local signal broadcasting indicator
3. Stereo broadcasting indicator
4. Current radio band indicator
5. Broadcaster information stored at the preset
6. Touch to view more on-screen buttons
7. Touch to seek backward
8. Touch for quick access to EQ level settings
9. Touch to seek forward
10. Touch to change between AM/FM bands
11. Clock
12. Current preset radio station
13. Current radio information
14. AF: Alternative Frequency indicator
15. TA: Traffic Announcement indicator
16. RDS setting options
17. Save the desired radio station
18. Touch to change between Local and Distance
19. Enter frequency directly
20. Search stations automatically

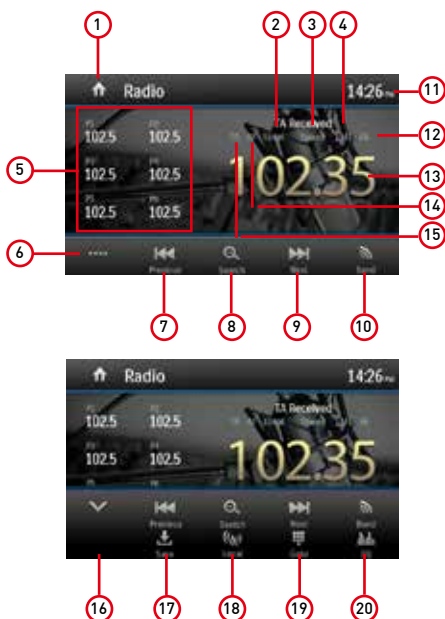

Select Radio as Playing Source

Open the Source Menu and then touch [Radio].

Select One Radio Band

Touch the [📶] icon on the user interface to select one radio band among FM1, FM2, FM3, AM1 and AM2.

Tune the radio

Auto Tuning

During auto tuning, the frequency will be changed in seek mode.

Touch the [◀] / [▶] icon on the user interface to tune in a higher / lower station.

Note: When a station is received, searching stops and the station is played.

Manual Tuning

Method 1:

Touch and hold [◀] / [▶] icon on the user interface more than 1 second to changed in steps higher / lower station. Repeat the operation to change step by step.

Method 2:

1. Touch the numeric keypad icon [🔢].
Numeric keyboard is displayed, touch number to input frequency.
2. Touch [✖] to delete the input number step by step.
3. Touch [OK] to enter.



Radio Mode

Preset Station

The unit has 5 bands, such as FM1, FM2, FM3, AM1, AM2, and each band can store 6 stations; the unit can store 30 stations in total.

Search Stations Automatically

Touch [🔍] to search station and store 6 strongest stations in current band automatically.

Manual Store

1. Tune to a station.
2. Touch [📁].
3. Touch one of the channels P1 to P6 to save the select band.



Tune to a Preset Station

1. Touch [Radio].
2. Select a band (if needed).
3. Touch one of the preset channels (P1 to P6) on the screen.

Local Seeking

Touch the [📶] icon and choose the Radio Local or Distance.

When the [📶] icon turns bright, only stations with a strong signal strength will be detected. Default is "Distance".

EQ Selection

Press the [📊] icon and enter the EQ setup.

RDS Basics

RDS transmits data to the radio which displays information such as name station, song artist, and song title.

RDS service availability varies with areas.

Adjust RDS Settings

1. In Radio menu, touch [⚙️].
The option menu is displayed.
2. Touch on the selected option to change the setting.
[RDS]: To turn on or off "RDS" function.
[CT]: To turn on or off "Clock Time" synchronization function.
[EON]: To turn on or off "EON" function.
[TA]: To turn on or off "TA" function.
[PTY]: To show PTY list.
[VOL]: Touch [◀]/[▶] to adjust TA volume.



Radio Mode

RDS (Radio Data System)

The unit provides basic functions of RDS.

RDS service availability varies with areas. Please verify if RDS service is available in your area.

AF Function

Alternative Frequencies Lists are used in conjunction with the PI code (Program Identification code) to assist automatic tuning.

Using this information, the radio can automatically search out another frequency of the same station.

Note:

- During auto switching radio frequency, some interference may be heard..
- Turning off AF function can settle this problem.

EON (Enhanced Other Networks)

When EON data is received, the EON indicator lights and the TA and AF functions are enhanced.

TA: Traffic information can be received from the current station or stations in other network.

AF: The frequency list of preset RDS stations is updated by EON data. EON enables the radio to make fuller use of RDS information. It constantly updates the AF list of preset stations, including the one that currently tuned into.

TA Function

The TA (Traffic Announcement) function lets the unit receive traffic announcements automatically.

The TA function can be activated by a TP (Traffic Program) station broadcasting traffic information.

When TA is activated and a traffic announcement is received, the current playing source will be overridden by the traffic announcement. The unit returns to the original source after the traffic announcement has been received.

CT (Clock Time)

Some stations broadcast the time and date within the encoded RDS signal. The clock time is automatically adjusted when 'CT' is set to 'ON'.

PTY Function

PTY is an abbreviation for the type of program defined by a code to define the program being broadcast (eg news or Rock).

The Options of PTY is displayed on the screen. To see the options PTY, tap the scroll bar and arrows on the screen.

When an option is selected PTY (eg News), the radio unit, the PTY search available. If the PTY requested was not found, the unit returns to the original radio frequency.

DAB radio


Select DAB as playing source

Press [MENU] button to enter main source menu, then select [DAB] to enter DAB mode.

If DAB is not on the current source menu, touch [←] / [→] icons on the bottom of the screen, or hold the center of screen and drag left/right to show more icons.

Playback menu

1. Show service list
 2. Enter the main menu
 3. Information area
 4. Display system time
 5. Display the 2nd menu
 6. Manual tune backward
 7. Search Mode
 8. Manual tune forward
 9. Intro
 10. Band switch
-
11. Turn on/off L Band
 12. Search all service available and Store stations automatically
 13. Search service by Programme Type
 14. Turn on/off traffic announcement
 15. Turn on/off Service Link

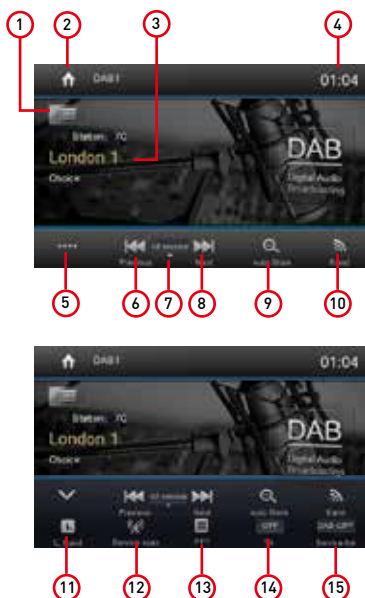

Select one DAB band

Touch [Band] icon on the screen to select one radio band among DAB1, DAB2 and DAB3.

Tune

There are four search mode. You can select search mode from the followings:

1. Preset Search: Search preset service one by one.
2. Current Search: Service Search in the current Ensemble.
3. ALL Search: Service Search for all stored by Station search.
4. Manual Search
During manual tuning, the frequency will be changed in steps.
Touch the [⏮] or [⏭] icon to tune in a higher / lower station.

Note:

When a station is received, searching stops and the station is played.

Intro

Press the [⏮] icon to intro. Each stored station will play for 10 seconds automatically.

Auto store

Only stations with sufficient signal strength will be detected and stored in the memory.

Touch [⏮] to search all service available and store stations automatically.

To stop auto store, press other icons having radio functions.

Note:

1. After auto store, the previous stored stations will be overwritten.
2. The unit has 3 bands, such as DAB1, DAB2 and DAB3.

DAB Radio

Manual store

- 1.Touch the [≡] icon to show list menu.
- 2.Touch the [⊕] icon to enter store preset service menu.
- 3.Select a position to store current service.
- 4.Touch [↶] to exit.



Delete stored services

- 1.Touch the [≡] icon to show list menu.
- 2.Touch [🗑] to delete stored services.

Recall the stored services

- 1.Touch the [≡] icon to show list menu.
- 2.Touch to select a preset service.



PTY Search

- Touch [PTV] icon to show PTY type.
- Touch the [▲] or [▼] icon to scroll, and touch to select.
- Touch [▼] to seek a channel within the selected category.

L-BAND ON/OFF

- Touch [L_{Band}] to turn on L-BAND function.

Service Link

To select Service Link mode, touch [Service Link] to choose "DAB-DAB", "DAB-RDS", "DAB-ALL" or "DAB-OFF".

Playback Mode

Load a Disc

You can play video, audio or images stored on the following discs:

- DVD Video, DVD-R, DVD-RW
- VCD
- Audio CD, CD-R, CD-RW

Note:Ensure that the disc contains playable content.


Eject a Disc

Press the [▲] key on the front panel to eject the disc. When the disc is ejected, the unit switches to the previous source.

Touch Screen Controls

The touch key areas for DVD playback are outlined below:

- A: Return to the main menu
- B: Play the video and display playback information
- C: Display onscreen control menu
- D: Time display

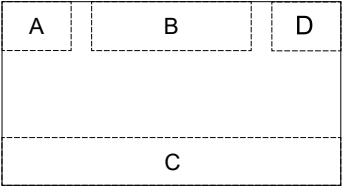

Controlling Playback

To access the on-screen controls, touch the screen except upper left corner, and touch again to cancel display. Touch [●●●] to view all function icons.

Connect a USB Device

1. Open the USB door.
2. Insert the small end of the USB cable to mini USB socket, then connect the other end of the cable to your USB device.

Remove a USB Device

1. Select other source on the main menu.
2. Remove the USB device.

Play/Pause

1. Once a disc, USB or SD/MMC card is inserted, play starts automatically.
For DVD movie, if a menu appears, press [▶] to start play.
2. To pause, touch [⏏].
To resume play, touch [▶].
3. Skip to previous / next track / chapter, press [⏮] / [⏭] key.

Previous/Next

Touch [⏮] / [⏭] key on the screen to skip to previous / next track / chapter.

Playback Mode

Search for a Folder

For Audio Files

1. Touch [🎵] to display all available audio folders.
2. Touch a folder, then touch the desired file.
3. Touch the file again to start play.

For Video Files

1. Touch [📺] to display all available video folders.
2. Touch a folder, then touch the desired file.
3. Touch the file again to start play.

For Picture Files

1. Touch [🖼️] to display all available picture folders.
2. Touch a folder, then touch the desired file.
3. Touch the file again to start play.

For Folder Control

1. Touch [📁] to display all available folders.
2. Touch a folder, then touch the desired file.
3. Touch the file again to start play.



Repeat

For DVD/VCD movie disc:

1. Touch bottom half of the screen to display menu on the screen.
2. Touch [••••] to display the 2nd menu.
3. Touch [↺] repeatedly to select:

DVD

[↺] Repeat chapter: Play the current chapter repeatedly.

[↺] Repeat title: Play all chapters in the title repeatedly.

[↺] Repeat off: Play all in the all repeatedly.

[↺] Repeat off: Cancel repeat play.

VCD

[↺] Repeat single: Play the current single repeatedly.

[↺] Repeat all: Play all in the all repeatedly.

[↺] Repeat off: cancel repeat play.

Playback Mode

For CD/MP3 files:

1. Touch anywhere except the upper left corner to display menu on the screen.
2. Touch [↔] repeatedly:
 - [↔] Repeat single: Play the current single repeatedly.
 - [↔] Repeat all: Play all in the all repeatedly.
 - [↔] Repeat off: Cancel repeat play.

Repeat A-B

You can repeat a specific of video file (from A to B).

1. Touch the screen to display control menu, if necessary.
2. Touch [••••] to display the 2nd menu.
3. Touch [A-B] repeatedly to mark:
 - Repeat A-: the start of the section to repeat.
 - Repeat A-B: the end of the section to repeat.The selected section plays repeatedly.
4. To exit A-B repeat mode, touch A-B repeatedly, [Repeat A-B off] is displayed.

Shuffle (Random) Play

You can play audio tracks/files in random order.

1. Touch the screen to display control menu, if necessary.
2. Touch [••••] to display the 2nd menu, if necessary.
3. Touch [✕✕] on the screen repeatedly to turn random play on or off.

Select Audio Mode

When you play VCDs, you can select an audio mode (R/L/Stereo).

1. During play, touch bottom half of the screen to display menu on the screen, if necessary.
2. Touch [••••] to display the 2nd menu.
 - Touch [🔊] repeatedly until the audio mode is selected.

Select Subtitle Language

For DVD or Divx discs that contain two or more subtitle languages.

1. During play, touch the screen to display menu on the screen, if necessary.
2. Touch [••••] to display the 2nd menu.
3. Touch [💬] repeatedly to select a language.
 - The selected language is displayed.

 
Playback Mode

Playback Information

Touch the screen when playing back DVD and VCD discs and the playback information will be displayed on the top area of the TFT.


For DVD

1. Disc type.
2. DVD Title information. "01/08" indicates that this DVD has 8 titles and the title playing back now is the first title.
3. DVD Chapter information. "005/012" indicates that current title has 12 chapters and the chapter playing back now is the fifth chapter.



For VCD

 1. Disc type.
2. VCD Track information. "01/08" indicates that this VCD has 8 tracks and the track playing back now is the first track.




Elapsed Time

1. Elapsed time of the current track.
2. Total time of the current track.



Direct Track Entry

 To select a track directly, touch the [⏏] icon on screen control to display the direct entry menu. Enter the desired track using the on-screen number pad. Press [OK] to the selected track.



Rotate Pictures

1. When you view pictures, touch the screen to display menu on the screen, if necessary.
2. Touch [••••] to display the 2nd menu.
3. Touch [🔄] repeatedly to rotate the picture.

Zoom

You can zoom in pictures for a close view.

1. When you view pictures, touch the screen to display menu on the screen, if necessary.
2. Touch [••••] to display the 2nd menu.
3. Touch [🔍] repeatedly to zoom in the picture.

Video Setup

Touch [🔧] to access video setup mode, touch [⏏] or [⏏] to set the desired effect.

You may set the brightness, contrast, saturation, and hue of the video output from 1 to 20.




Bluetooth Mode

You can make or receive phone calls with Bluetooth-enabled phones through the unit. You can also listen to music from a Bluetooth-enabled device.

Pair the Bluetooth-enabled Devices

To connect your Bluetooth device to the unit, you need to pair the device to the unit. Pairing needs only to be done once. You can pair up to five devices.

1. Turn on the Bluetooth function on the device.
2. Touch [] to search for Bluetooth device with the unit.
3. Start scanning on the Bluetooth device and select the unit "M-DVD6000DAB"
4. Enter default password "0000".




Tip:

- The operational range between this unit and a Bluetooth device is approximately 5 meters .
- Before you connect a Bluetooth device to this unit, familiarize yourself with the Bluetooth capabilities of the device.
- Compatibility with all Bluetooth device is not guaranteed.
- Any obstacle between this unit and a Bluetooth device can reduce the operational range.
- Keep this unit away from any other electronic device that may cause interference.

Disconnect Bluetooth Device

To disconnect one device, touch [] .

Tip

- The device will also be disconnected when the device is moved beyond the operational range.
- If you want to reconnect the device to the unit, place it within the operational range.
- If you do not want to reconnect the device to the unit automatically, touch [], then set [Auto connect] to [Off]. For details, see the "Adjust Bluetooth Settings" section.

Make a Call

1. Select Bluetooth function in the home menu.
2. Pair the phone with the unit.
3. Search for phone number from the following list:
 - [Phone Book]
 - [Call Log]
 - [Missed calls]
 - [Received calls]
 - [Dialed calls]



Or touch the number pad directly, then touch [] to dial.



Bluetooth Mode

Receive a Call

By default, all incoming calls are received automatically.

1. If there is an incoming call, the screen will appear "Incoming".
2. You may touch the screen to select [hang up] or [Answer].

Tip

- You can select to receive calls manually by set [Auto answer] to [Off] status.



Adjust Bluetooth Settings

1. In Bluetooth menu, touch [⚙].
The option menu is displayed.
2. Touch on the selected option to change the setting.
 - [Bluetooth]: To turn on or off "Bluetooth" function.
 - [Auto connect]: To turn on or off "Auto connect" function.
 - [Auto answer]: To turn on or off "Auto answer" function.
 - [Pairing code]: To set pairing code.
 - [Phone book sync]: To synchronize phone book, touch [OK] on the sub-menu popped out.
Phonebook sync may take several minutes to load on initial setup.



Tip

- You can also adjust Bluetooth settings in the "Settings" menu.

Bluetooth Music Mode

A2DP

A2DP is short for Advanced Audio Distribution Profile. The mobile phones supporting this function can transmit stereo audio, whereas the ones not supporting this function can transmit mono audio only.

AVRCP

AVRCP is short for Audio/Video Remote Control Profile. The mobile phones supporting this function can control the playback of a Bluetooth audio player.




In the mode of the music player working, if you want to make a phone call, you can press the number keys on the mobile phone. At the same time the music player will stop. The TFT screen will display "Calling", after the call received, the voice will be transferred to the unit. When the call ends, the screen will display music playing menu.

If there is an incoming phone call, the music player will stop, and the screen will display "Incoming". When the call ends, the screen will display music playing menu.

Settings

General Settings


- 1. Touch [General] in the settings page.
- 2. Touch to highlight a setting.
- 3. Touch on the option to display/select an option.
- 4. Touch [] or press the Menu button on the front panel to exit.

General settings	Options	Description
Radio region	USA	Select one that matches your location.
	China	
	Japan	
	Europe	
	Europe (LW)	
	OIRT	
Radio range	Local	
	Distance	
Blackout	Off/10s/20s	
Dimmer mode	Night/Dark/Normal/Brightness	Adjust the display brightness.
Beep	On	Turn on the beep sound. Each time you press a button, the unit beeps.
	Off	Turn off the beep sound.
Calibration	Start	Calibrate the touch screen.


Calibration

When the touch operation is not sensitive or valid, you should calibrate the touch screen through calibration setting function. Adjust the response positions of the touch panel as followings:

- 1. Press the [Calibration] option on the setup menu to enter.
- 2. Touch [Start] to enter.
- 3. Aim at center of [+], follow the path as shown of the figure, after steps from 1 to 5, touch anywhere on the screen to save and exit from calibration. Or wait for 30 seconds to exit without making changes.

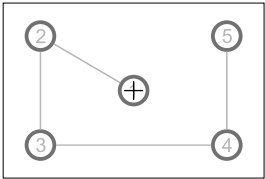

Video Settings

- 1. Touch [Video].
- 2. Touch an option repeatedly to select:
- 3. Touch [] or press the Menu button on the front panel to exit.

Video settings	Options	Description
Detect parking brake	On	Disable video
	Off	Enable video

When detect parking brake is set to "On" , the screen will display [Warning!!! " Video playback is disabled for your safety. Engage parking brake to watch video] The above warning screen will prevent the driver watching images.

Settings

Sound settings

1. Touch [Sound].
2. Touch an option repeatedly to select:
3. Touch [🏠] or press the Menu button on the front panel to exit.

Sound settings	Options	Description
Subwoofer	On	Turn on the subwoofer.
	Off	Turn off the subwoofer
Subwoofer filter	80Hz	Select subwoofer filter criteria.
	120Hz	
	160Hz	

Time settings

1. Touch [Time].
2. Touch an option repeatedly to select:
3. Touch [🏠] or press the Menu button on the front panel to exit.

Time settings	Options	Description
Date	Y/M/D	Touch [▲] or [▼] to set year, month and day.
Clock	12Hr/24Hr	Touch [12Hr] or [24Hr] to switch clock mode.
Time	H / M / AM / PM	Touch [▲] or [▼] to set hour and minute.
		Touch [▲] or [▼] to set AM/PM (only for 12Hr).

Language settings

1. Touch [Language].
2. Touch an option repeatedly to select.
3. Touch [🏠] or press the Menu button on the front panel to exit.

Language settings	Description
OSD	Select on-screen display language.
DVD audio	Select DVD audio language. Options available depend on DVD disc.
DVD subtitle	Select DVD subtitle language. Options available depend on DVD disc.
Disc menu	Select DVD menu language. Options available depend on DVD disc.


Bluetooth settings

1. Touch [Bluetooth].
2. Touch an option repeatedly to select.
3. Touch [🏠] or press the Menu button on the front panel to exit.

Bluetooth settings	Options	Description
Bluetooth	On	Turn on the Bluetooth function.
	Off	Turn off the Bluetooth function.
Auto connect	On	If the pre-paired device is within the effective range, the unit re-connects to pre-paired device automatically.
	Off	Need to re-connect manually.
Auto answer	On	Answer paired phone call automatically.
	Off	Answer phone call manually.
Pairing code	Set the password for pairing the unit with other Bluetooth device.	
Mic setting	Internal or External	Before setting, make sure that the external microphone is installed.

Settings




DVD settings

1. Touch [DVD].
2. Touch an option repeatedly to select.
3. Touch [] or press the Menu button on the front panel to exit.

DVD settings	Options	Description
Set password	Set password to restrict the play of discs. The default password is 0000.	
Rating level	Kid safe	Acceptable for children.
	G	Acceptable for general viewers.
	PG	Parental guidance suggested.
	PG-13	Unsuitable for children under age 13.
	PG-R	Recommend parents to restrict children under 17 to view.
	R	Restricted recommend parents to guide children under 17 to view.
	NC-17	Unsuitable for children under age 17.
	Adult	Acceptable for adults only.
DRC	On/Off	Dynamic range compression on or off.
Load factory	Restore to default settings.	

 Volume settings

You can set different volume for different modes.

1. Touch [Volume].
2. Touch on a source.
3. Touch [] or [] to assign value: 0 to 12.
When switching to the source, the volume increases or decreases automatically.
4. Touch [] or press the Menu button on the front panel to exit.

Other Modes

Other Devices

You can connect an external audio/video device to the unit.

1. Connect the external device with the supplied AV cable.
2. Touch the upper left corner to display the main menu.
3. Touch [AV1] front input or [AV2] rear input.


Reset

When the unit hangs up, you can reset it.

Press [RESET] with a ball-point pen or similar tool.

Tip:

When the unit has been reset, all the settings will return to default settings.

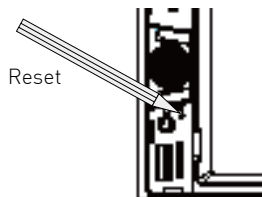

Replace a Fuse

If there is no power, the fuse may be damaged and need to be replaced.

1. Take out the unit from dashbord.
2. Check all electrical connections.
3. Buy a fuse that matches the amperage of the damaged fuse.
4. Replace the fuse while the units power is disconnected.

Navigation (GPS)

1. Touch the upper left corner to display home menu.
2. Touch [Navigation], to start the navigation software.
3. For instructions on using of navigator, refer to the manufacturer's user manual.

Note:

While Navigation is running, you can view the previously selected source by holding the [MENU] button. Press again and hold the [MENU] button to return to the navigation mode.

Where it was used the Bluetooth function you can display the navigation following the procedure described above.

Steering Wheel Control Programming

1. Touch the upper left corner to display home menu.
2. Touch [SWC], the SWC menu will display.
3. Select the keys corresponding to the functions of steering wheel controls by tapping the KEY and define the desired function.
4. Touch [Pair] to program.
5. Press each individual steering wheel control button for each corresponding function.
6. Once the final steering wheel control button is programmed, the functions are saved and the programming will end.
7. Touch [Reset] to reset the programming.



Specifications

General

Reference Supply Voltage	12V ==
Operating Voltage Range.....	10.5 - 15.8V ==
Max Operating Current.....	15A
Grounding System.....	Car Battery Negative Pole
Dimensions(WXHXD).....	178X100X167.9mm
Weight(main unit).....	2.1kg

FM

Signal Noise Ratio	≥55dB
Residual Noise Sensitivity (S/N=30dB)	18dBμV
Frequency Response (±3dB)	20Hz~12.5KHz
Station Seeking Level.....	20~28dBμV
Distortion	≤1.0%
Stereo Separation (1KHz).....	≥25dB
Antenna Impedance.....	75Ω
Frequency range.....	87.5 /108.0MHz

DAB

Residual Noise Sensitivity (RF=72dBm)	60dB
Stereo Separation (1KHz).....	≥55dB
Frequency range.....	174 /240MHz

AM

Residual Noise Sensitivity (S/N=20dB)	30dBμV
Selectivity (±9KHz)	≥50dB
Frequency range.....	522/1620KHz

BT

Frequency	2,480 GHz
EIRP power	4,60 dbm

GPS

Frequency	1,500 GHz
-----------------	-----------

LCD

Screen size.....	6.2 inches[16:9]
Display resolution.....	800X480dots
Contrast ratio.....	400
Brightness	280cd/m2

DVD Player

Signal / Noise Ratio.....	80dB
Dynamic Range.....	80dB

Power output

Frequency Response (±3dB)	20Hz~20KHz
Maximum Output Power	4×45W
Load Impedance	4Ω

AUX IN

Distortion	≤0.5%
Frequency Response (±3dB)	20Hz~20KHz
Audio Input Level.....	0.5Vrms

Audio

Audio Output Impedance.....	100Ω
Audio Output Level	2Vrms[Max]

Video

Normal Video Input Level (CVBS)	1.0±0.2V
Video Input Impedance.....	75Ω
Video Output Impedance	75Ω
Video Output Level.....	1.0±0.2V

Version Software

MCU.....	Ver 1.20 June 9, 2017
----------	-----------------------

Specifications

Supported Formats:

- USB or memory file format: FAT16,FAT32
- Mp3 bit rate(data rate): 32-320 Kbps and variable bit rate
- Directory nesting up to a maximum of 8 levels
- Number of albums/folders: maximum 99
- Number of tracks/titles: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8(maximum length:128 bytes)

Unsupported Formates:

- Empty albums:an empty album is an album that does not contain MP3 files,and is not be shown in the display.
- Unsupported file formats are skipped.For example,Word documents(.doc) or Mp3 files with extension.dlf are ignored and not played.
- AAC,WMV,PCM audio files

Supported MP3 Disc Format:

- ISO9660,Joliet
- Maximum title number: 512(depending on file name length)
- Maximum album number: 255
- Supported sampling frequencies: 32kHz,44.1kHz,48kHz
- Supported Bit-rates: 32-320Kbps and variable bit rate

Supported Video Formats:

- DVD
- MP4
- Xvid (optional)

Region Code

According to DVD sale region, the whole world is divided into six regions. A DVD disc can be played back only when its region code is compatible with that of the player in use.

Region 1: USA, Canada, East Pacific Ocean Islands;

Region 2: Japan, West Europe, North Europe, Egypt, South Africa, Middle East;

Region 3: Taiwan of China, Hong Kong of China, South Korea, Thailand, Indonesia, South East Asia;

Region 4: Australia, New Zealand, Mid & south America, South Pacific Ocean Islands/Oceania;

Region 5: Russia, Mongolia, India, Middle Asia, East Europe, North Korea, North Africa, North West Asia;

Region 6: Chinese Mainland.

Cautions when using Discs

1) DO NOT use irregular shaped disc.

2) Disc Cleaning

Use a dry, soft cloth to wipe the disc from center to edge, only neutral detergent can be used.

3) When playing a new disc


New disc may have some rough spots around the inner and outer edges. If such a disc is used, remove these rough spots with a pencil or ball-point pen, etc.

Troubleshooting

What appears to be trouble is not always serious. Please check the following points before calling a service center.

Problem	Cause	Corrective action
General		
Unit can not power on	Unit fuse blown.	Install new fuse with correct rating.
	Car battery fuse blown.	Install new fuse with correct rating.
	Illegal operation	Reset the unit.
No/low audio output	Improper audio output connection.	Check wiring and correct.
	Volume set too low.	Increase volume level.
	Speakers damaged.	Replace speakers.
	Heavily biased volume balance.	Adjust the channel balance to center position.
	Speaker wiring is in contact with metal part of car.	Insulate all speaker wiring connections.
Poor sound quality or distortion	Pirated disc is in use.	Use original disc.
	Speaker power rating does not match unit.	Replace speakers.
	Wrong connections.	Check wiring and correct.
	Speaker is shorted.	Check wiring and correct.
Unit resets itself when engine is off	Incorrect connection between ACC and BATT.	Check wiring and correct.
TFT monitor		
Warning information is shown at all times	Parking break wiring is not correct.	Check wiring and correct.
Flashing image or interference appears on screen	The color system of DVD disc does not match the monitor.	Adjust the color system of the DVD disc playing back or the monitor in use.
	Pirated disc is in use.	Use original disc.
	Video cable damaged.	Replace cables.
	Improper video signal connections.	Check wiring and correct.
Disc playback		
Cannot insert disc	A disc is already inside the unit.	Eject current disc and insert new one.
Disc does not play back	Disc is warped or scratched.	Use disc in good condition.
	Disc is dirty or wet.	Clean disc with soft cloth.
	Incompatible disc is used.	Use compatible disc.
	Disc is inserted upside down.	Insert disc with label side up.
	Disc region code is not compatible with unit.	Use disc with proper region code.
PBC cannot be used during VCD playback	PBC is not available on the disc.	Use disc with PBC available.
Repeat or search function is invalid during VCD playback	PBC is on.	Turn PBC off.

PIN NO.	Function	
	Connector A	Connector B
1	Rear right (+) / Purple	
2	Rear right (-) / Purple with black stripe	
3	Front right / Gray	
4	Front right (-) / Gray with black stripe	ACC+ / Red
5	Front left (+) / White	Antenna-Power Control/ Blue
6	Front left (-) / White with black stripe	Illumination / Orange
7	Rear left (+) / Green	Battery 12V(+) / Yellow
8	Rear left (-) / Green with black stripe	Ground / Black

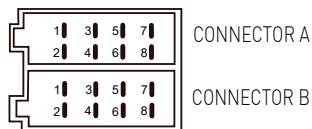

Declaration of Conformity



There are no restrictions of use.

The manufacturer Aldinet S.p.A declares that the type of radio equipment - Multimedia Navigation Receiver, model M-DVD6000DAB, brand Macrom - complies with the 2014/53 / EU Directive.

The full text of the EU Declaration of conformity is available at the following internet address:
www.macrom.it or at
Aldinet S.p.A. Viale Colombo, 8 - 20090 Trezzano S/N (MI) Italy

Made in China by
Aldinet S.p.A.
Viale Colombo, 8 - 20090 Trezzano S/N (MI) Italy



The MACROM brand is a registered trade mark of ALDINET S.p.A.

w w w . m a c r o m . i t