


Steering wheel control interface installation kit for:

## CITROEN/FIAT/PEUGEOT

Model:	Citroen Jumper	since 2014	con Unità principale originale VP1
	Fiat Ducato	since 2014	con Unità principale originale VP1
	Peugeot Boxer	since 2014	con Unità principale originale VP1

**Kit contents:** Antenna adapter  
SWC steering wheel control wiring harness  
SWC CAN bus interface  
Wiring harness

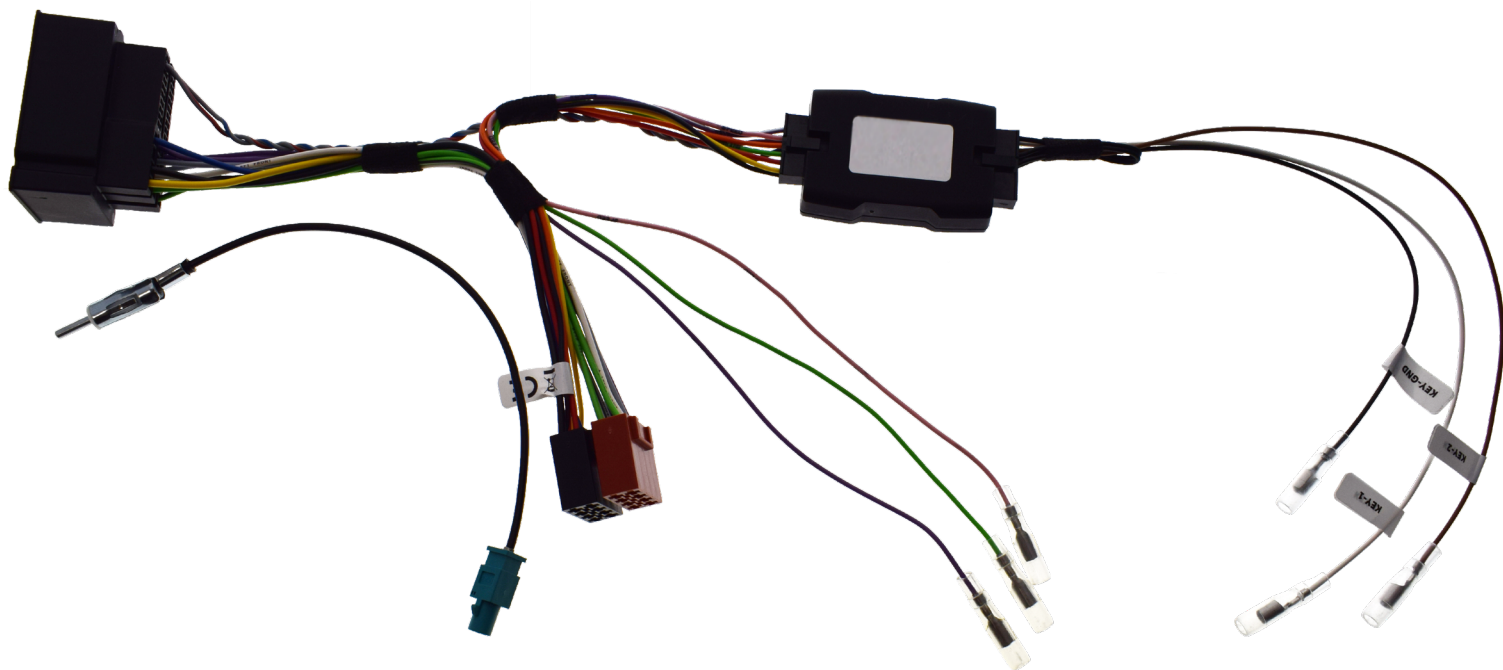


# INSTALLATION MANUAL

## 347DUC290VP1

# - WIRING:

## CAUTION!

To avoid damage from electrostatic discharge (ESD), the **MAIN CONNECTOR** must be connected before connecting the connectors on the vehicle side.

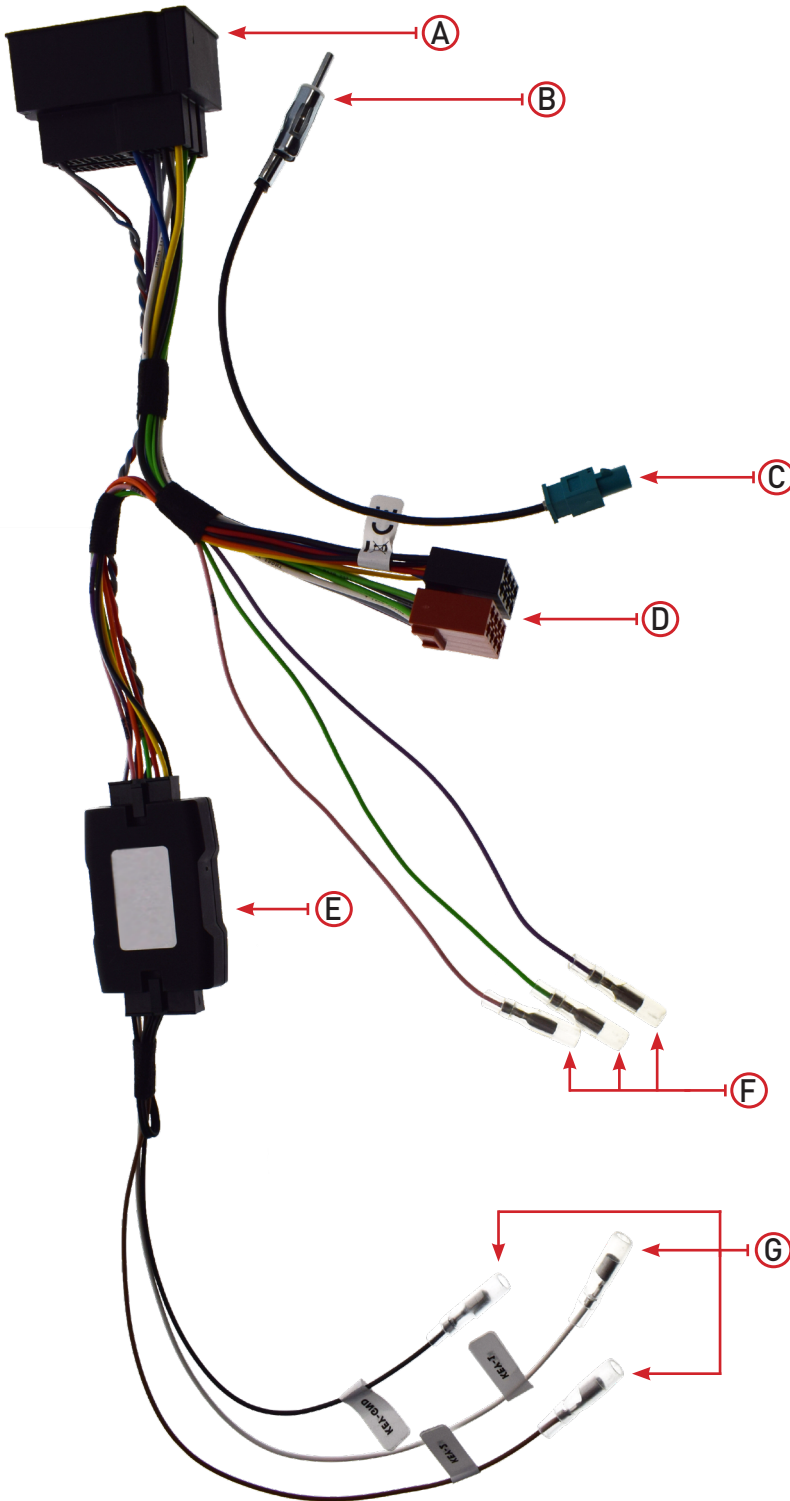

## KEY:

- A** To the original vehicle connector
- B** To the FM radio antenna connector
- C** To the vehicle antenna connector
- D** To the radio's ISO connectors
- E** SWC CAN bus interface
- F** Service retrieval
  - Pink - Odometer
  - Green - Parking brake
  - Purple/White - Reverse (Reverse)
- G** To the radio's SWC connectors
  - White - **KEY 1**
  - Brown - **KEY 2**
  - Black - **KEY GND**

**Note:** These 3 wires must all be connected to the corresponding Macrom wiring located on the back of the radio.

# - STEERING WHEEL CONTROL SETUP:

## A) Layout compatible with steering wheel controls:



The steering wheel controls perform the following functions (if supported by the radio and the vehicle):

- |                  |                |                   |
|------------------|----------------|-------------------|
| 1) Volume +      | 4) End call    | 7) Previous track |
| 2) Volume -      | 5) Mute        |                   |
| 3) Incoming call | 6) Next search |                   |

## B) Layout compatible with steering wheel control buttons:



The steering wheel control buttons perform the following functions (if supported by the radio and the vehicle):

- |             |                                 |                    |
|-------------|---------------------------------|--------------------|
| 1) Mute     | 4) Voice control (if available) | 6) Next search     |
| 2) Volume + | 5) Incoming call                | 7) Previous search |
| 3) Volume - |                                 | 8) End call        |



## WARNING!

The original radio must be a VP1 radio as indicated on the label.

# - VEHICLE LANGUAGE SETTINGS:

If the system language cannot be set using the buttons indicated:



## **Please carry out all of the following steps:**

1. Turn the key and switch on the instrument panel
2. Apply the handbrake
3. Press and hold the brake pedal
4. Leave the driver's door open

**NOTE:** Steps 3 and 4 are essential to carry out the configuration procedure

## **You can select one of the following languages by pressing the "Vol +" button:**

Dutch  
English  
French  
German  
Italian  
Polish  
Portuguese  
Spanish  
Turkish

Release the brake pedal/close the driver's door

---

The images in the installation manual are for illustrative purposes only and are not binding for the installation of the product.

All installation work must be carried out exclusively by a qualified installer.

The manufacturer/dealer is not liable for any incidental or consequential damages.

12/2021 ALL RIGHTS RESERVED. Subject to technical changes.

No liability for printing errors.

Rev.00 10/2024